

CLEANING

Introduction

The perfect coffee experience depends on a perfectly cleaned coffee machine, cooling unit and Flavor Station (option). Increase your product quality! Clean your coffee machine and add-on units at least once a day and more frequently if necessary.

The automatic cleaning process involves cleaning the coffee, cooling unit and Flavor Station (if applicable).



NOTICE

Dirty components

Dirty components can have a negative effect on the function of the machine and the quality of beverages.

- a) Clean the removable components using the 5-step method.



The removable components of the coffee machine, cooling unit, CleanMaster and Flavor Station (optional) are not dishwasher-safe.



Rinsing is not a substitute for daily cleaning! Rinsing is necessary to remove residue build-up in the coffee and milk systems.

The machine automatically rinses after certain time intervals as well as when it is switched on or off.

Required cleaning accessories

- Cleaning tablets
- Microfiber cloth
- Paint brush
- Brush set
- Cleaning agent cartridge (for cooling unit/Flavor Station with EC)

5-step method



Clean the removable components of your coffee machine using the 5-step method. The display shows you the components that can be removed during cleaning.



NOTICE

Cleaning the cooling unit containers and accessories

Clean the containers and accessories, such as the lid, suction hose, suction nozzle, etc. using the 5-step method.

- | | |
|---|-------------------------------------|
| 1. Remove coarse dirt with a cleaning brush or paint brush. | 3. Wash the components. |
| 2. Soak the components in hot water with a mild cleaner. | 4. Rinse the components thoroughly. |
| | 5. Dry the components. |

Additional areas to be cleaned by hand

- Inner side of the door and door gasket on cooling unit
- Inner surfaces and shelf (if applicable) in the cooling chamber

Cleaning instructions A400/A600

- Interior, pullout and bottle holders (if applicable) of the Flavor Station

Starting the cleaning process

Starting cleaning via the Cleaning and Maintenance menu




When the cleaning cycle is complete, the machine either switches back to the maintenance level or the energy saving mode. Your service technician can set the desired option for you.




1. Tap the Franke logo.



2. Enter the PIN (1111).
3. Press Ok.

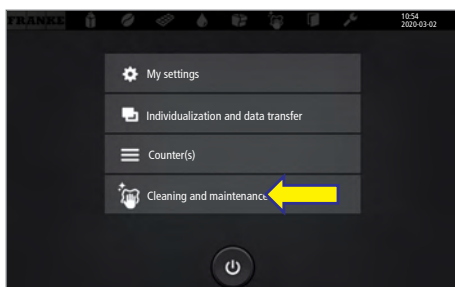

4. Select Cleaning and maintenance.

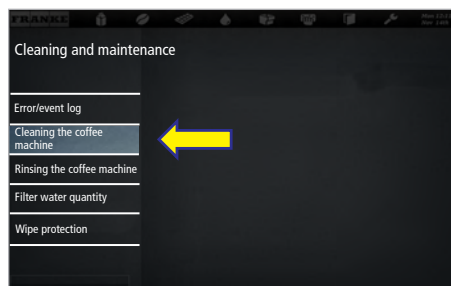

5. Select Clean coffee machine.
6. Confirm message with Yes to begin the cleaning process.
7. Follow the instructions on the user interface and confirm the completed steps by selecting Next.

⇒ The machine shows the next step.



8. Have the spout cleaning device ready and position it under the lowered spout when prompted.
9. Follow the instructions on the user interface and confirm the completed steps by selecting Next.

⇒ The machine shows the next step.

Weekly cleaning




Clean the machine components listed in this chapter at least once a week, in addition to the daily cleaning process. Clean the machine immediately if you notice any soiling.

Cleaning the machine surface

1. Clean the surface of the machine with a damp cloth.
2. If necessary, use a mild cleaner. **NO-TICE! Do not use abrasive cleaners.**

Cleaning the bean hopper and powder hopper

- ✓ Use a dry cloth or one that has been moistened with water only.
 - ✓ Do not use any cleaners, as these alter the taste of the coffee.
1. Open the door of the coffee machine.
 5. Remove the oil film on the inside of the bean hopper using a cloth.
 6. Clean the powder hopper with a cloth. Use detergent if necessary. Wipe the inside of the hopper with a dry cloth.

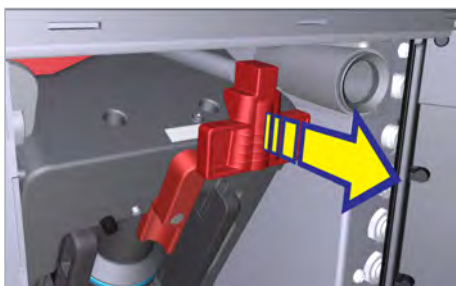


2. Pull the locking slide towards the front up to the stop.



3. Remove the bean hopper by lifting it upwards.
4. Empty the bean hopper and powder hopper (if present).



7. Attach the bean hopper and powder hopper (if applicable).

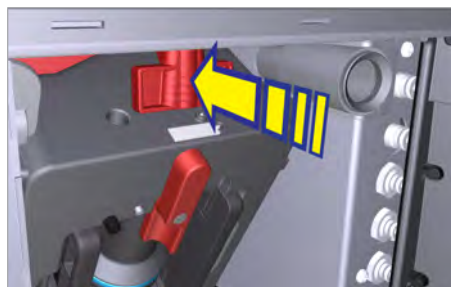

8. Push the locking slide all the way in.
9. Close the door.

Cleaning the screen

1. Tap the Settings symbol at the top left.
 2. Select Cleaning and Maintenance.
 3. Select Wipe protection.
- ⇒ The user interface is locked for 20 seconds.
4. Clean the surface with a damp cloth.

Cleaning instructions A400/A600

Replace water filter




1. Tap the Franke logo.




2. Enter the PIN (1111).


3. Press Ok.

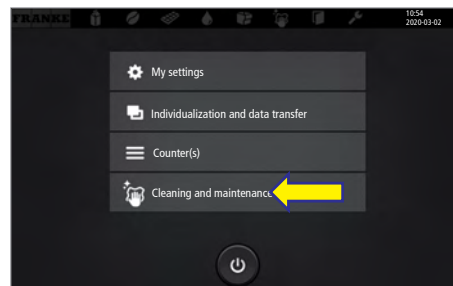

4. Select Cleaning and maintenance.

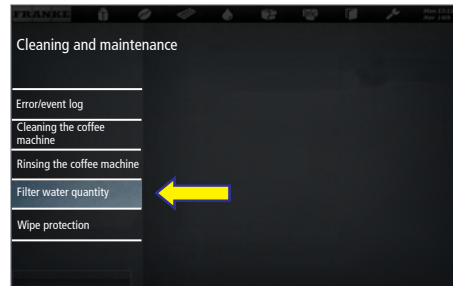

5. Select Filter water quantity.

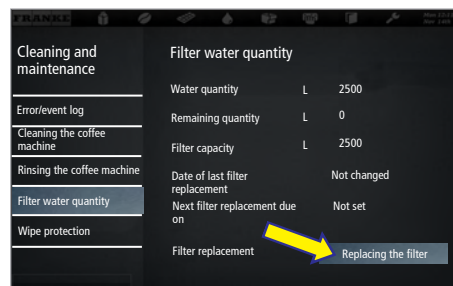

⇒ The guided filter replacement procedure starts.