

CARE OF THE A800

Even a coffee machine like the A800 must be cared for. To ensure high-quality flavor, the A800 must be cleaned at least once a day and serviced at regular intervals.

Introduction to automatic cleaning



Your responsibility for the perfect coffee experience.

The perfect coffee experience depends on a perfectly cleaned coffee machine. Increase the quality of your products!

Clean your coffee machine at least once a day and more frequently if necessary.

Follow the 5-step method for all removable parts.



Accessories required:

- Cleaning tablets
- Microfiber cloth
- Brush set
- Cleaning container
- Clean solution

5-step method for removable parts



Cleaning and maintenance plan

Frequency	Task	Information
Daily	Clean the A800	See p. 32
	Clean the interior, the inside of the door and the door seal in the refrigeration	See p. 37
	Clean the milk hose and suction filter of the milk container	See p. 37
	Cleaning the coffee bean hopper	See p. 36
Weekly	Cleaning the powder container	See p. 36
	Cleaning the brewing unit	See p. 37
	Rinse the A800	See p. 35
If needed/prompted	Descale the jet regulator for hot water	See p. 37
Every six months or every 40,000 pro-	Maintenance by service technician	Contact a service technician

Starting the automatic cleaning



The factory-set PIN code is 1111.

Switch to Maintenance level. Authenticate with the PIN code if necessary.

02



Select Cleaning and maintenance.



Danger of scalding.
During cleaning, hot water and steam are released repeatedly.

- Do not touch the outlets or the area beneath them.

03



Select Clean Coffee Machine or Clean Flavor Station and confirm.

04



Follow the instructions on the operating interface and confirm with Continue.

05



The machine guides you to the next step.



After the cleaning cycle, the machine switches back to either the maintenance level or to the energy saver mode. Your Service technician can set the desired option for you.

Clean the steam wand

01



Fill container to approx. 5 cm with cold water and 30 ml of clean solution.
Place under the steam wand for approx. 1 minute.

02



Select Autosteam/Steam.
The steam wand is being cleaned.

03



Empty the container.
Fill the container with cold water and place under the steam wand.

04



Select Autosteam/Steam.
The steam wand is being rinsed.

05



Empty the container.
Wipe the steam wand with a cloth.

Rinsing the coffee machine



- Rinsing is not a substitute for daily cleaning. Rinsing is necessary to remove residue build-up in the coffee and milk systems.
- The A800 automatically rinses after certain time intervals as well as when it is switched on or off.

01



Switch to Maintenance level.

02



Select Cleaning and maintenance.

WARNING

Danger of scalding.

Hot water is released during rinsing.

- Do not touch the outlets or the area beneath them.
- Do not place anything on the drip grid.

03



Select Rinse Coffee Machine and confirm. A800 is being rinsed.


Cleaning the monitor screen

01



Switch to Maintenance level.

02

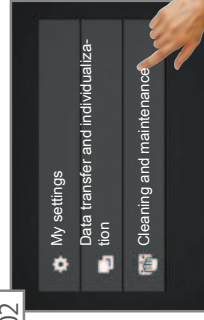

Select Cleaning and maintenance.




You cannot cancel the locking of the operating interface. Locking lasts 20 seconds.

03




Select Wipe Protection. The operating interface is locked for 20 seconds.

04

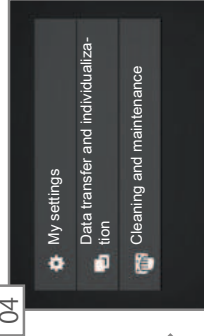


Clean the monitor screen. Maintenance level appears.


Cleaning the bean hopper and powder container

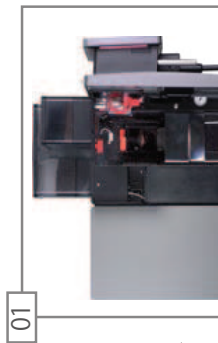

Open the door.

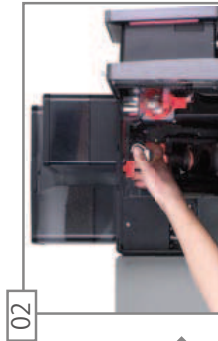

Pull the locking slide all the way to the front.

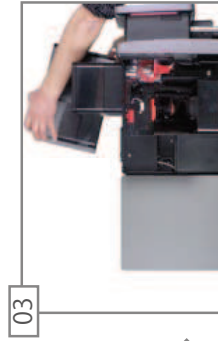

Lift up the bean hopper.
Empty the bean hopper.

NOTE

Soiling, formation of mildew

The bean hopper dries slowly and can continue to release moisture during fitting.

- Do not bring the bean hopper into direct contact with water.
- Only use a damp cloth for cleaning.
- Remove detergent residue.



Rub out the bean hopper with a dry cloth.



Attach the bean hopper.



Lift the powder container up.
Empty the powder container.



Clean the powder container with a cloth. Use detergent if necessary. Rub out the powder container with a dry cloth.

CAUTION

Cutting injuries/crushing

The powder container's conveyor mechanism can cause cuts or crushing injuries.

- Exercise care when cleaning the powder container.



Clean the powder chute with a brush.



Attach the powder container.



Push the locking slide all the way in.

NOTE

Impairment of function

If the bean hopper and powder container are not locked correctly, this may impair both the function of the coffee machine and the product quality.

- Push the locking slide all the way in.




Close the door.

Cleaning the brewing unit



Open the door.

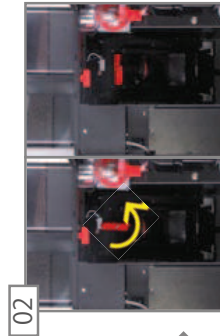

Release the brewing unit lock in counterclockwise direction.




Remove the brewing unit.



Clean the brewing unit.



Insert the brewing unit.

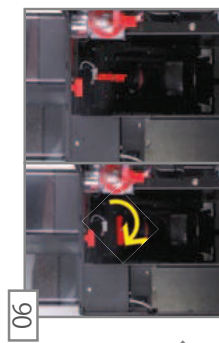

Lock the brewing unit in clockwise direction.

Cleaning the accessories

NOTE

Impairment of function
Soiled accessories can
have a negative affect on
the function and quality of
the drinks.

- Clean the accessories using the 5-step method.
- Follow these instructions for accessories.



Remove the milk hose.

Clean the hose with the brush.

Clean the suction filter with screw-in brush.



Clean the water tank/waste-water tank and connecting lines.



Remove the jet regulator for hot water with the tool and descale.